

FIREPLACE BARRIER FRAMES:

| Model Number | Fits DV Cast Iron Stove Models |
|--------------|--------------------------------|
| DFB30CCBL-1 | DVP30CC(30,70) Series |

1. Place the barrier screen on the front of the cast iron fireplace. The brackets will engage the casting opening between the glass and the cast iron frame. See Figure 1.
2. Place one side of the barrier screen clips into the front casting opening with the bottom clip placed on top of the lower hinge protrusion.
3. After engaging the clips with one side of the opening, pivot the other side of the barrier screen inward until it snaps into position.

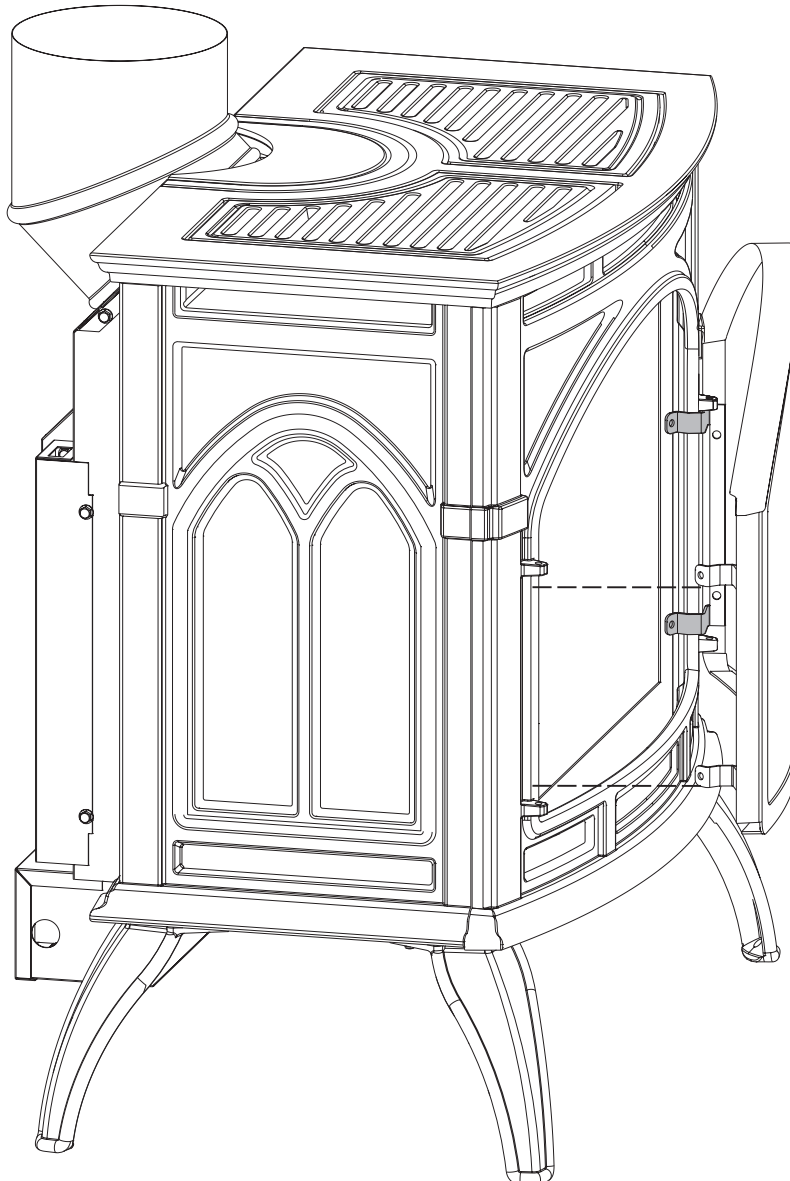


Figure 1

CHARPENTE DE CADRES D'ÉCRAN POUR FOYER :

| Numéro de modèle | Pour les modèles de poêle en fonte à ventilation directe |
|------------------|--|
| DFB30CCBL-1 | Séries DVP30CC(30,70) |

1. Placer l'écran de protection à l'avant du foyer en fonte. Les pattes s'enclenchent dans l'ouverture en fonte entre le verre et le cadre en fonte. Voir Figure 1.
2. Placer un côté des fixations de l'écran de protection dans l'ouverture en fonte avant, l'attache inférieure placée sur le dessus de la saillie de la charnière inférieure.
3. Après avoir enclenché les attaches d'un côté de l'ouverture, faire pivoter l'autre côté de l'écran vers l'intérieur jusqu'à ce qu'il se fixe en position.

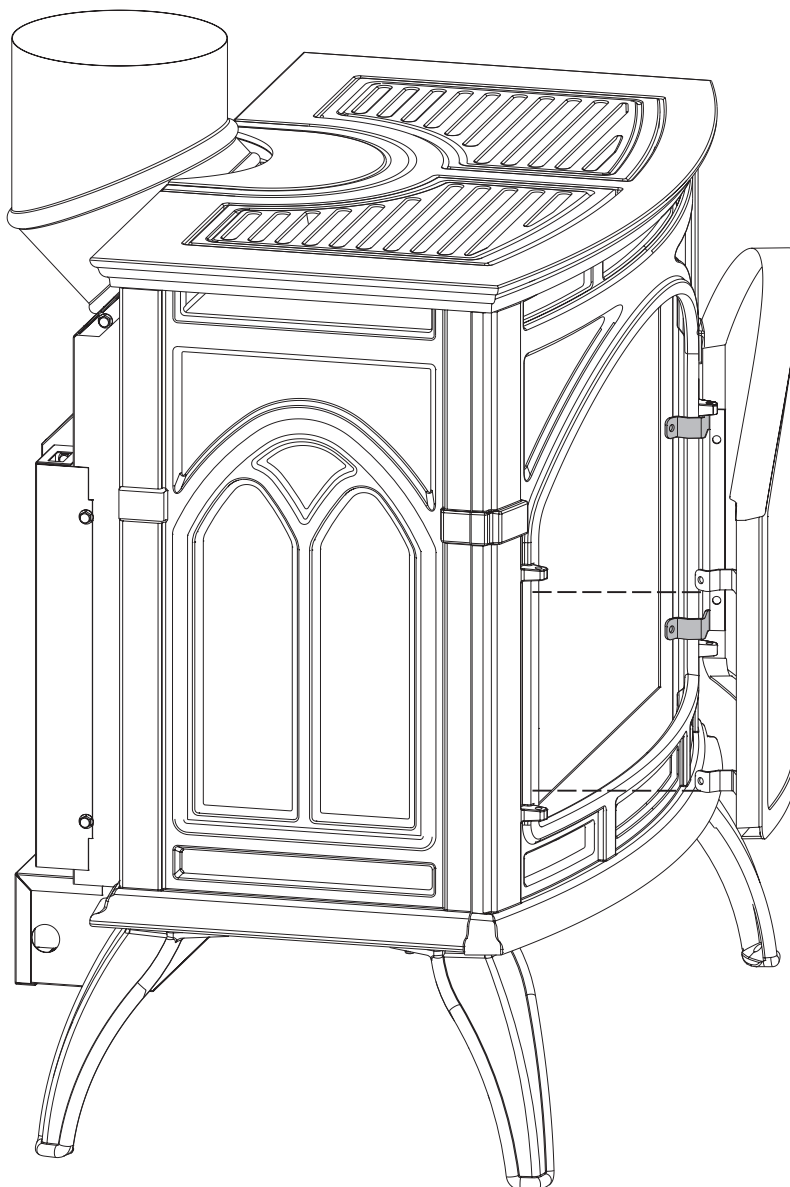


Figure 1